
 




INTERCOM PANEL SPLITTER Installation Instructions

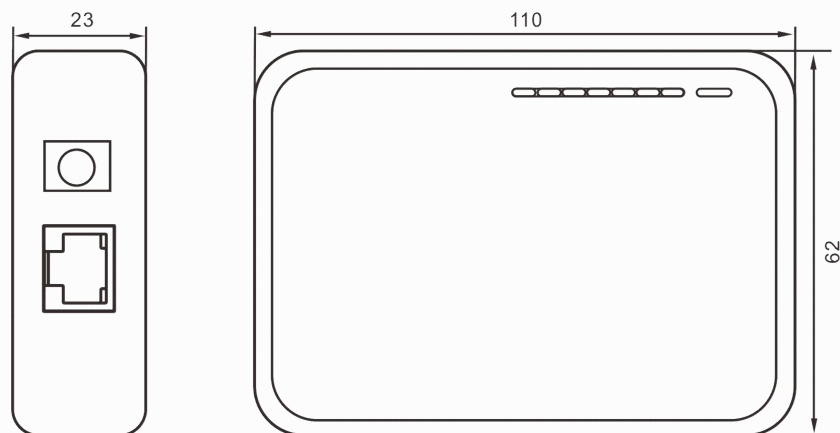

Packing list




Power adapter 1pcs
(DC12V/3.3A)



Installation
manual 1pcs



Certification 1pcs

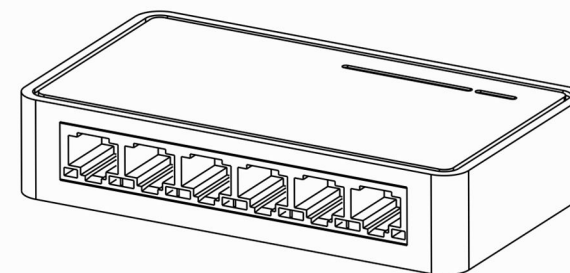

Wechat

SPON Communication Technology Co., Ltd.
www.spon.com.cn
Service Hotline : +86-400-823-2588
Reserve the amendment right without notice




V1.0B151230


IP NETWORK INTERCOM SYSTEM



Interface description

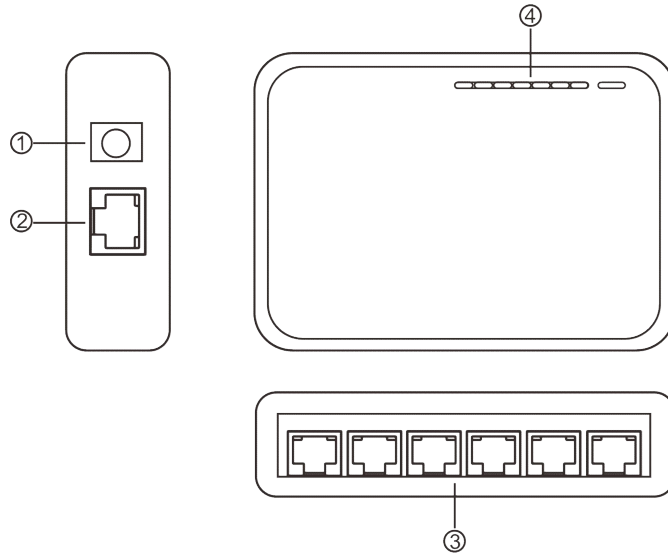


- ①Power interface: Connect 12V DC power.
- ②Intercom terminal interface: Connect intercom terminal.
- ③Intercom panel interface: Connect intercom panel.
- ④Status indicator .

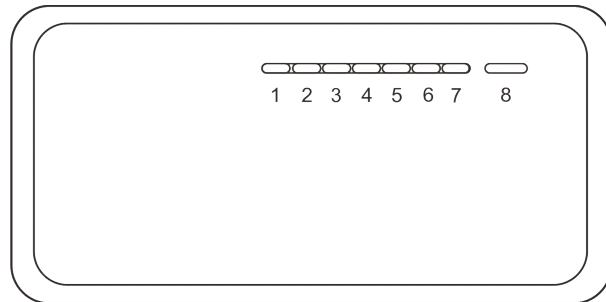

- 1-6 is panel connection status indicator.
- 7 is power indicator.
- 8 is intercom terminal connection indicator.

Note: the corresponding status indicator will be on if connected the intercom terminal and panel, otherwise the indicator will be off.


Connection diagram

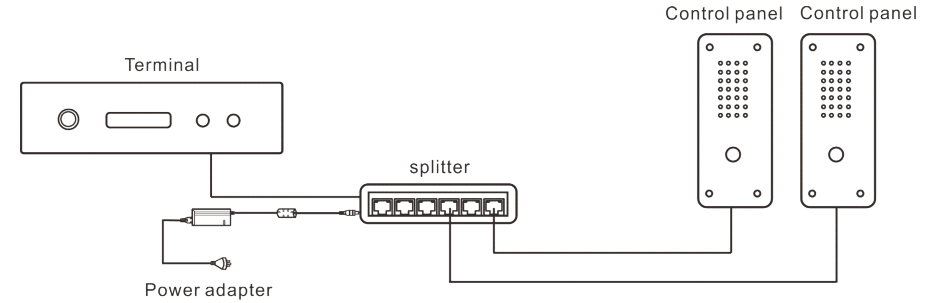

Note: It's required to add the splitter when the connected panel is more than 6pcs, the added quantity as listed (—); When there have multiple (7-16) panels connected, the splitter intercom panel port 6 connect to the other splitter intercom terminal port as follows:

Panel QTY	1 set	≥2,≤6 sets	≥7,≤11 sets	≥12,≤16 sets
Splitter QTY	No need	1 set splitter	2 set splitter	3 set splitter

List (—)

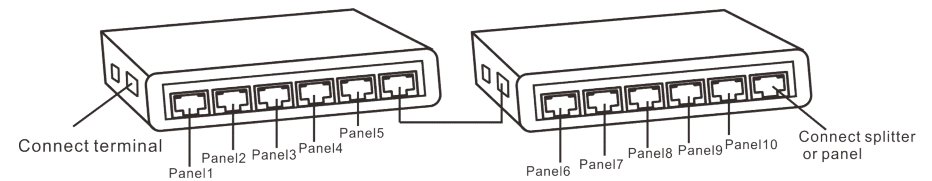

Splitter and multiple panels connection diagram

Appearance installation dimension