


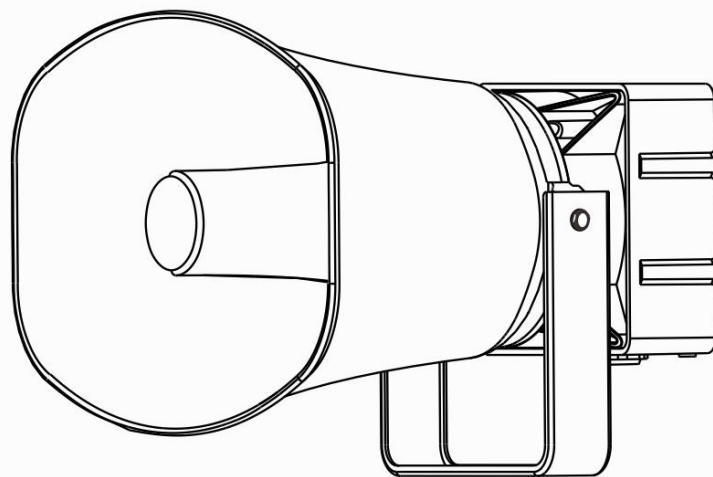

NETWORK HORN SPEAKER

User Manual



IP PA System



Table of Contents:

- 1. Important Safety Precaution
- 2. Product Overview
 - 2.1 Basic Introduction
 - 2.2 Product Features
 - 2.3 Hardware Interface Description
 - 2.4 Wiring
- 3. Quick Operation Guide
 - 3.1 Network Settings
 - 3.2 User-Defined Terminal Parameter Settings
 - 3.3 Basic Function
 - 3.4 Troubleshooting

1. Important Safety Precaution

Please read this User Manual carefully before using this product and follow all the safety precautions mentioned herein.

During Installation:

(1) Avoid humidity:

Please do not expose the device to rainy environment or other humid environment, otherwise it may lead to fire or electric shock.

(2) Use correct power supply:

Please use the specified power adapter for the device, using high voltage power supply may lead to fire or electric shock.

(3) Protect the electric wire:

Do not scratch, cut or twist the power cord, keep the power cord away from any heating device, do not place heavy objects on top of the power cord, otherwise it may lead to fire or electric shock.

During Use:

(1) If anything goes wrong:

During use of this device, if any of these anomalies mentioned below happens, please cut off the electricity immediately, otherwise it may lead to fire or electric shock.

- smoke or strange smell coming out of the device.
- water or other foreign object gets into the device.
- damage on the product shell.
- damage of the power cord (cable core exposed or broken).
- malfunction of the device (no network connection or no sound).

(2) Do not open the product shell:

There are high voltage parts inside of the product shell, opening the product shell without permission may lead to fire or electric shock.

(3) Do not touch the device when it thunders:

To avoid electric shock, please do not touch the device or power plugs when it thunders.

(4) Do not place liquid containers on top of the device:

If accidentally knock over the liquid container and let any liquid get into the device, it may lead to fire or electric shock.

(5) Cautions when the device is not in use:

If the device is not in use for 10 days or longer, please cut off the electricity and unplug the power plug from the power socket, otherwise it may lead to fire or electric shock.

2. Product Overview

Here is what you can find in this section:

- **2.1 Basic Introduction**
- **2.2 Product Features**
- **2.3 Hardware Interface Description**
- **2.4 Wiring**

2.1 Basic Introduction

Network Horn Speaker is embedded with the IP audio digital network audio technology of independent intellectual property rights of our company, can receive other terminals or server launched broadcast, support the browser to perform functional settings. It has the function of loop fault detection. It can detect the working state of the speaker and display it on the server software.




2.2 Product Features

- Receive broadcast: Network Horn Speaker can receive broadcast from servers or other terminals.
- Loop detection: the Network Horn Speaker has self checking function, and can detect the working state of speakers through the loop.
- The timing program plays: upload the audio source every day needed to the server, programmer the playback plan, and the Network Horn Speaker can be automatically broadcast according to the planned tasks assigned by the server.
- System settings through browser: users can configure of the Network Horn Speaker, such as the network parameters , audio parameters, amend the login password and so on through the browser to realize the personalized configuration.
- Support POE power supply.

2.3 Hardware Interface Description

Interface Description

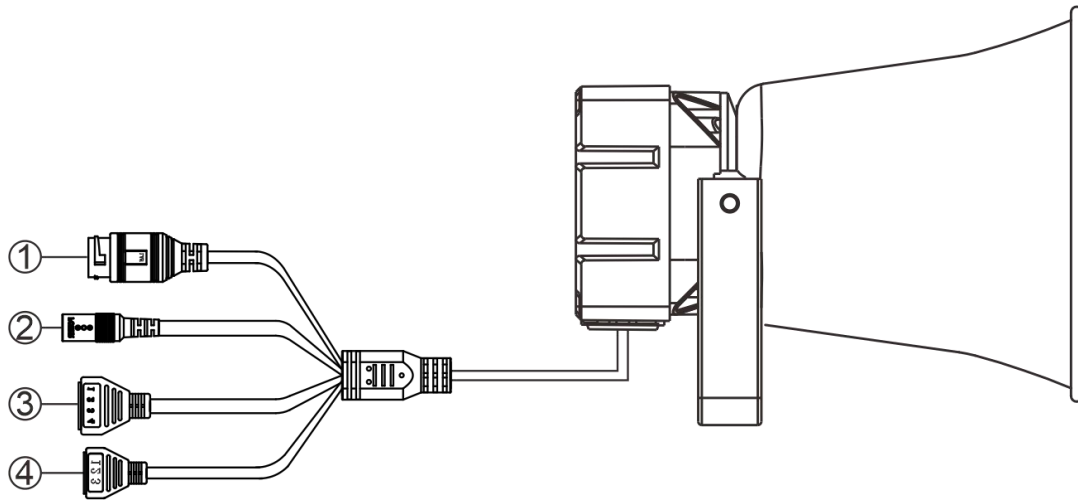

①Network interface: insert a cable to the switch or POE switch.

②Power interface: DC24V/2.7A, supply for the Network Horn Speaker. (The device supports POE, need no more power supply if the network interface are already connected with POE switch.)


③Integrated interface

- 1: Line in
- 2: GND
- 3: Alarm in
- 4: GND.

④Alarm out interface

- 1: Normal close end
- 2: common end
- 3: Normal open end

2.4 Wiring

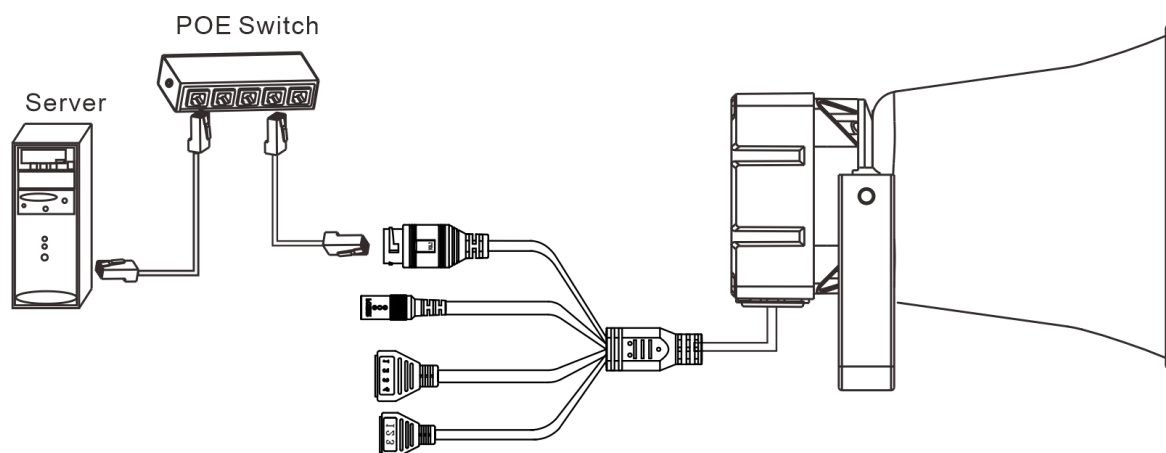

Note: The device supports two ways of power supply: POE switch or power adapter, POE switch can not be connected when power adapter is used, and no more power supply is needed when POE switch is used.

3. Quick Operation Guide

Here is what you can find in this section:

- **3.1 Network Settings**
- **3.2 User-defined Terminal Parameters**
- **3.3 Basic Function**
- **3.4 Troubleshooting**

3.1 Network Settings

Basic network settings

After the terminal is successfully connected, turn on the power, and change the network parameters of the terminal according to the on-site application environment. There are two methods:

IP Device Configuration Tool

- (1) Run "IP DevConfig Tool", after the tool is started, the interface will display the IP terminal that has been scanned, or you can click the "Quick scan" button to scan the terminal again.
- (2) Configure the terminal's IP network information.

Method 1: Check the designated terminal and click "Terminal Configuration"->"Parameter Configuration" to configure IP network information for the terminal.

Method 2: If the scanning tool does not scan the terminal, you can click "Advanced" to perform mandatory IP configuration. This method will force all terminals in the network to be configured to the same IP address and other information, so when using this method, please ensure that only one target terminal is connected in connected to the network.

For specific operation steps, please refer to the User Manual of "IP Device Configuration Tool".

Remark:

1. If you use Windows 7 system to operate, please use the administrator mode to run the IP DevConfig Tool, and turn off the firewall and related software;
2. If the terminal is not scanned, the mandatory configuration method can be used. At this time, the IP DevConfig Tool can only configure the network parameters of one terminal at a time. When using this method to configure terminal network parameters, please make sure that one computer corresponds to only one target terminal.
3. If you need an IP DevConfig Tool, please contact our company's after-sales service.

Webpage Method


Enter the web interface of the Network Horn Speaker, modify the parameters of the network parameters according to the scene environment, and click "save" after setting up.

The specific operation steps refer to the network parameters settings in the user-define terminal parameters.

3.2 User-defined Terminal Parameters


Login web interface

(1) Please input the IP address of Network Horn Speaker to the address column of the browser (the factory default IP address is 192.168.1.101, it will automatically play the IP address when the press the terminal key without the cable inserted), then enter.

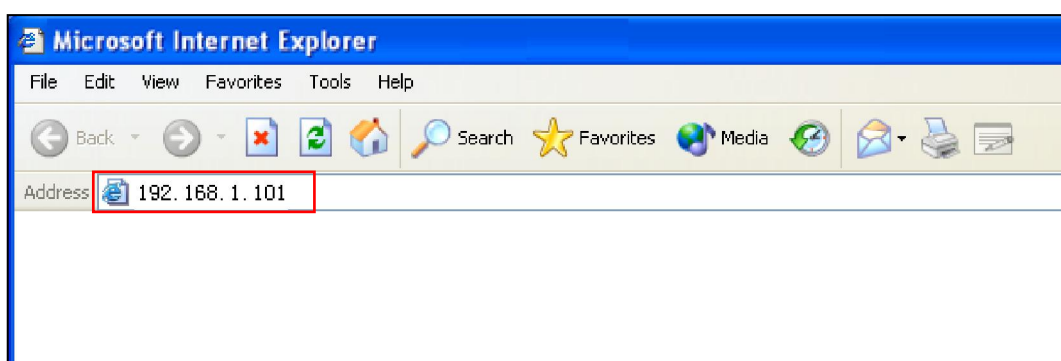

(2) Enter the username and password to log in.

Note: Default username and password are both admin.

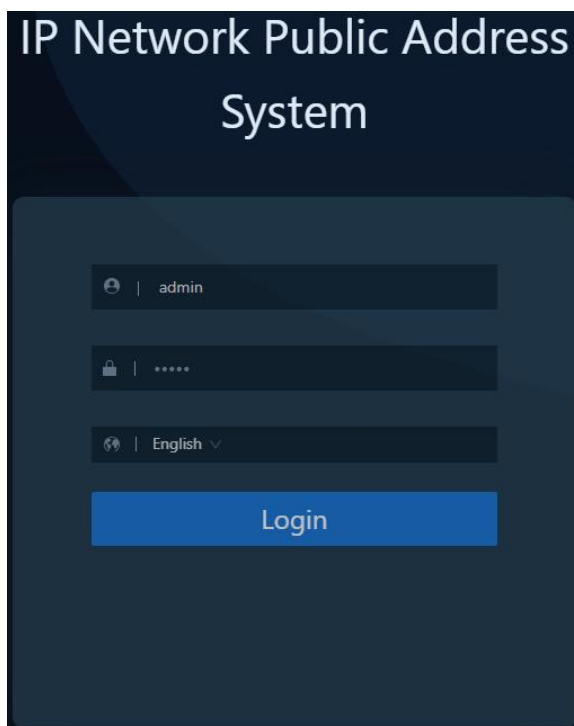


(3) Press login to enter to the Network Horn Speaker web page.

(Note: If the relevant parameter modification in the web page does not take effect after saving, please clear the cache and set them again.)

Running Status

When login to the web page, click “Running Status”, it will show the information of: Terminal ID, server IP, server port, device task status, MAC address,terminal IP address, gateway and other information.

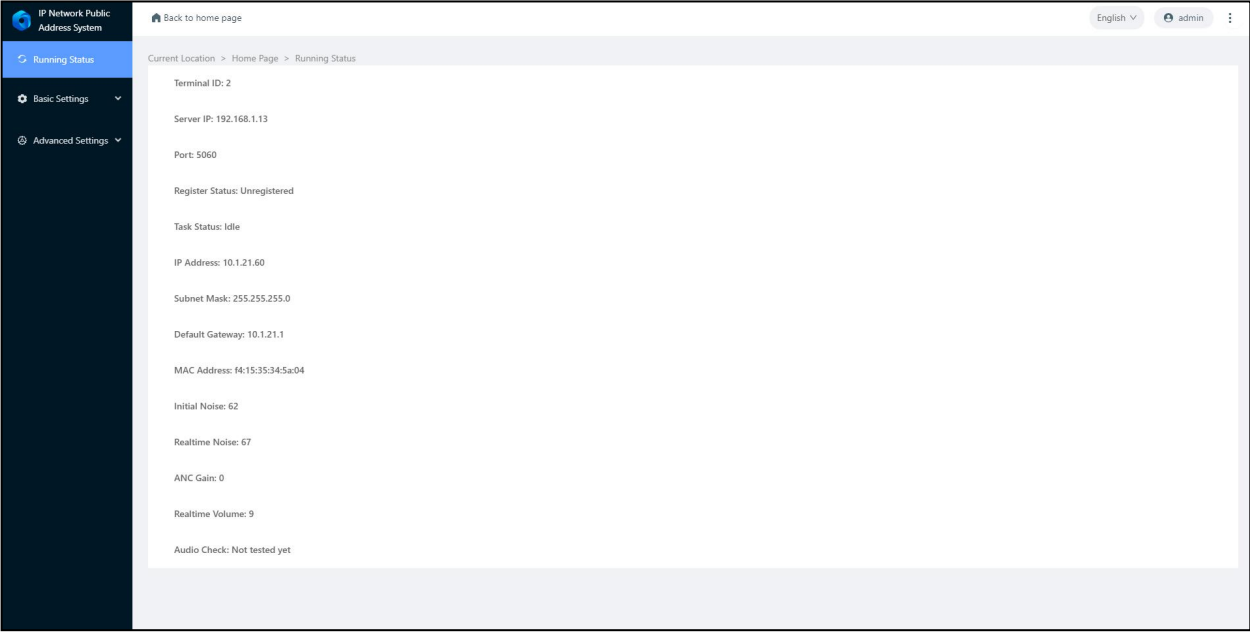

Network Parameter

Please set the terminal's network parameters according to the network environment of the terminal. Click on [save] after setting, the parameters will take effect after reboot.

The screenshot shows the 'Network Parameter' configuration page in the 'IP Network Public Address System'. The left sidebar contains a menu with options: Running Status, Basic Settings, Network Parameter (selected), Server Parameter, Audio Parameter, Alarm Options, Multicast, Onvif Parameter, Remote Control, Broadcast Task P..., and Advanced Settings. The main content area has a breadcrumb trail: 'Back to home page' > 'Current Location' > 'Home Page' > 'Basic Settings' > 'Network Parameter'. The 'Network Parameter' section includes input fields for IP Address (10.1.21.60), Subnet Mask (255.255.255.0), Default Gateway (10.1.21.1), Primary DNS (192.168.1.1), and Secondary DNS (192.168.1.1). A green 'Save' button is located in the top right corner of the configuration area.

The relevant Settings are as follows:


IP Address	The IP address of the device, the factory default IP is 192.168.1.101, which cannot be duplicated with other terminals.
Subnet Mask	The subnet mask of the LAN network.
Default Gateway	The gateway of the network.
Primary DNS	The IP address of the preferred DNS server (domain name resolver) of the network.
Secondary DNS	The IP address of the alternate DNS server (domain name resolver) of the network.

Server Parameter

Network Horn Speaker support with SIP protocol and NAS protocol, you can choose the transport protocol based on the actual server you log in to.

SIP Protocol

The default is SIP protocol. If the device is logged into the NAS (intercom) protocol server, you need to select the NAS protocol here, please refer to the NAS protocol setting introduction for specific parameter settings.

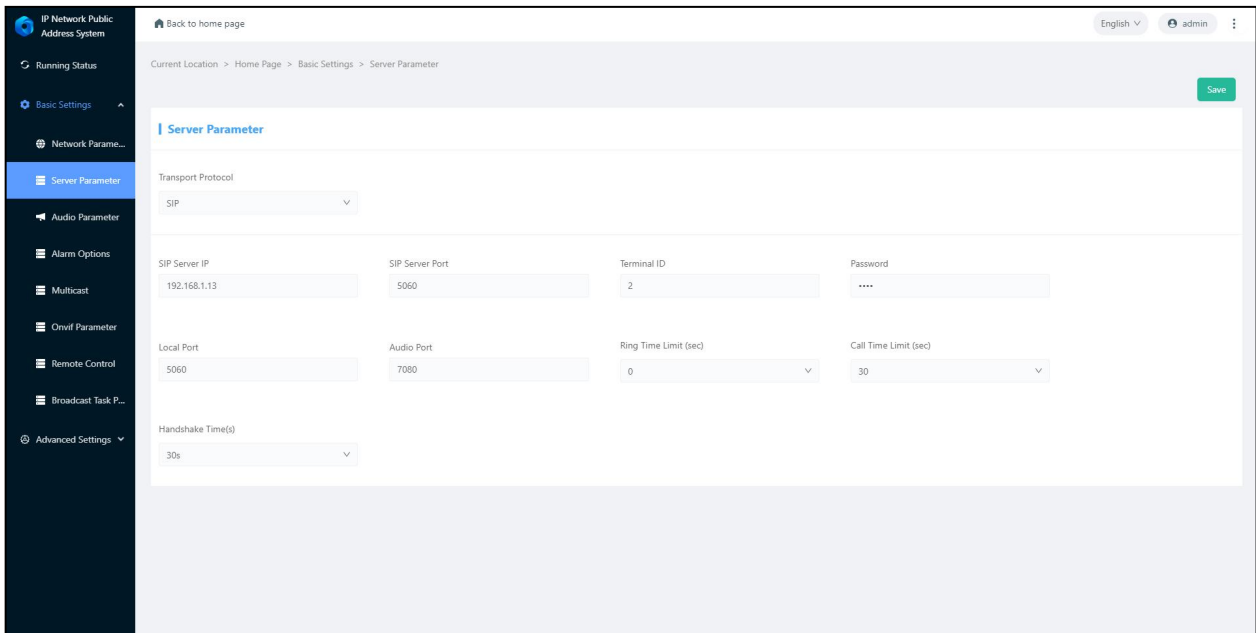

The relevant Settings are as follows:

Transport Protocol	Setting the protocol for normal communication between device and sever.
SIP Server IP, port	IP address of the SIP server that the terminal logs into. Please enter the correct IP address of the SIP server. The port number cannot be changed except in special cases. (Default is 5060)
Terminal ID	The SIP account of the terminal, it can not be duplicated with other terminals.
Password	Password for terminal to login to SIP server, default is 1234.
Local Port	Configure the local port according to the actual situation; the default is 5060.
Audio Port	Configure the audio port according to the actual situation.
Ring Time Limit (sec)	Set the time limit of automatically answer call.
Call Time Limit (sec)	Set the time limit of call waiting.
Handshake Time(s)	Set the time to make handshake with server.

NAS Protocol

IP Network Public Address System

Back to home page

English admin

Current Location > Home Page > Basic Settings > Server Parameter

Save

Server Parameter

Transport Protocol
NAS

Terminal ID
1

Local Port
2046

Primary Server IP
192.168.1.13

Primary Server Port
2048

Secondary Server IP
192.168.1.14

Secondary Server Port
2048

Login Interval(s)
3

Handshake Time(s)
30s

The relevant Settings are as follows:

Transport Protocol	Setting the protocol for normal communication between device and sever.
Terminal ID	Unique number to identify the terminal and cannot be duplicated with terminals or other hosts.
Local Port	Configure the local port according to the actual situation; the default is 5060.
Primary Server IP, Port	IP address of the NAS server that the terminal logs in to. Please enter the correct IP address or domain name of the NAS server. The port number cannot be changed except in special cases (the default is 2048).
Secondary Server IP, Port.	The IP address and port of the backup NAS server.
Login Interval(s)	Interval of login server.
Handshake Time(s)	Set the time to make handshake with server.

Audio Parameter

Set the audio related parameters of the device, Click on [save] after setting, the parameters will take effect after reboot.

The screenshot displays the 'Audio Parameter' configuration page within the 'IP Network Public Address System' interface. The left sidebar contains navigation options: Running Status, Basic Settings, Network Parameter, Server Parameter, Audio Parameter (selected), Alarm Options, Multicast, Orvill Parameter, Remote Control, and Broadcast Task P... The main content area shows the 'Audio Parameter' settings. At the top, there is a 'Back to home page' link and a 'Save' button. The settings are organized into several sections: 'Broadcast Output Volume' (set to 9), 'Microphone Sensitivity' (set to 6), 'Network Adaptability' (set to Low Latency), and 'Call Release Time(ms)' (set to 800). Below these are 'Noise Suppression Level' (set to mid) and 'Line input threshold' (set to 200). The 'ANC' section includes 'ANC' (set to Enable), 'ANC Mode' (set to Disperse), 'Min Realtime Noise(10-120dB)' (set to 50), and 'Max Realtime Noise(10-120dB)' (set to 70). The 'Gain' section includes 'Min Gain' (set to -6dB), 'Mid Gain' (set to -3dB), 'Max Gain' (set to 0dB), and 'Response Time(sec)' (set to 30).

The relevant Settings are as follows:

Broadcast Output Volume	The total volume of audio input by the device during broadcasting, range: 0-15.
Microphone Sensitivity	Set the microphone sensitivity, the greater the value, the higher the sensitivity.
Network Adaptability	Audio quality can be adjusted according to network environment. Low latency, low bandwidth, and custom are optional. You can customize the audio cache time when you choose Custom.
Call Release Time(ms)	Setting how long will the terminal hear the voice of the IP based smart cabinet speaker after the terminal stops talking while IP based smart cabinet speaker is talking with other terminals.
Noise Suppression Level	Set the Noise Suppression Level. Low, mid, and high are optional.
Line input threshold	You can set the “line input threshold” through “Line Input Calibration” button below “system settings”.
ANC	Enable or disable the Ambient Noise Controller (ANC) feature. The Unit will adjust the output volume according to the ambient noise level.
ANC Mode	<p>Linear and Disperse are optional.</p> <p>When it is set to linear, you need to set the Max Gain, Min Gain, Gain Ratio, and Response Time.</p> <p>When it is set to disperse, you need to set Min Realtime Noise, Max Realtime Noise, Min Gain, Max Gain, and Response Time.</p> <p>If the Realtime Noise in the running status page is smaller than Min Realtime Noise, the ANG gain in the running status page will be the setting value of Min Gain.</p> <p>If the Realtime Noise in the running status page is bigger than</p>

	<p>Min Realtime Noise, but smaller than Max Realtime Noise, the ANG gain in the running status page will be the setting value of Mid Gain.</p> <p>If the Realtime Noise in the running status page is bigger than Max Realtime Noise, the ANG gain in the running status page will be the setting value of Max Gain.</p> <p>The response time is the time that ANG gain changes.</p>
--	--

Alarm options

Set the alarm related parameters of the device, Click on [save] after setting, the parameters will take effect after reboot.

Note: the alarm input interface function of this device is corresponding to the settings of input2 in this page.

The relevant Settings are as follows:

Input1/Input2 Action	<p>Set the trigger action when closing alarm input1/input2 port.</p> <p>Audio File: Trigger playback of selected file (Task ID).</p> <p>Call: Trigger a call to prescribed call target.</p>
Input1/Input2 Signal Mode	Select the input1/Input2 signal mode. Level and Edge are optional.
Input1/Input2 Signal State	Select the input1/input2 signal state. Normal Open and Normal Close are optional.
Action Target	<p>Audio File: Indicate Task ID configured using the Audio File Upload Tool.</p> <p>Call: Indicate SIP call target (SIP ID or IP address).</p>

Multicast

Set whether to enable multicast or not. Support up to 10 multicast addresses as maximum.

IP Network Public Address System

Running Status

Basic Settings

Network Param...

Server Parameter

Audio Parameter

Alarm Options

Multicast

Onvif Parameter

Remote Control

Broadcast Task P...

Advanced Settings

Back to home page

English admin

Save

Current Location > Home Page > Basic Settings > Multicast

Multicast Options

Multicast Function

Disable

Multicast Priority	Multicast Address	Multicast Port
1	239.255.0.1	8060
2	239.255.0.2	8070
3	239.255.0.3	8080
4	239.255.0.4	8090

The relevant Settings are as follows:

Multicast function	<p>Set whether to enable multicast function or not.</p> <p>In the case where there are multiple servers in the LAN, different servers must fill in different addresses and port numbers when they initiate multicast broadcasts without interference.</p> <p>Support up to 10 multicast addresses as maximum and priority settings (priority from high to low is 1-10).</p>
--------------------	---

Onvif Parameter

Set the onvif related parameters of the device, Click on [save] after setting, the parameters will take effect after reboot.

IP Network Public Address System

Running Status

Basic Settings

Network Parameter

Server Parameter

Audio Parameter

Alarm Options

Multicast

Onvif Parameter

Remote Control

Broadcast Task P...

Advanced Settings

Back to home page

English admin

Current Location > Home Page > Basic Settings > Onvif Parameter

Save

Onvif Parameter

ONVIF Protocol: Disable

ONVIF Control Port: 9090

RTSP Port: 554

ONVIF Username: admin


ONVIF Password: *****

The relevant Settings are as follows:

Onvif Protocol	Set whether to enable Onvif pulling stream function.
ONVIF Username	If it is enabled, please set the onvif username and password.
ONVIF Password	
Onvif Control Port	Set the Onvif control port, the default is 9090.
RTSP Port	Set the RTSP port, the default is 554.

Remote Control

Set the remote control related parameters of the device, Click on [save] after setting, the parameters will take effect after reboot.

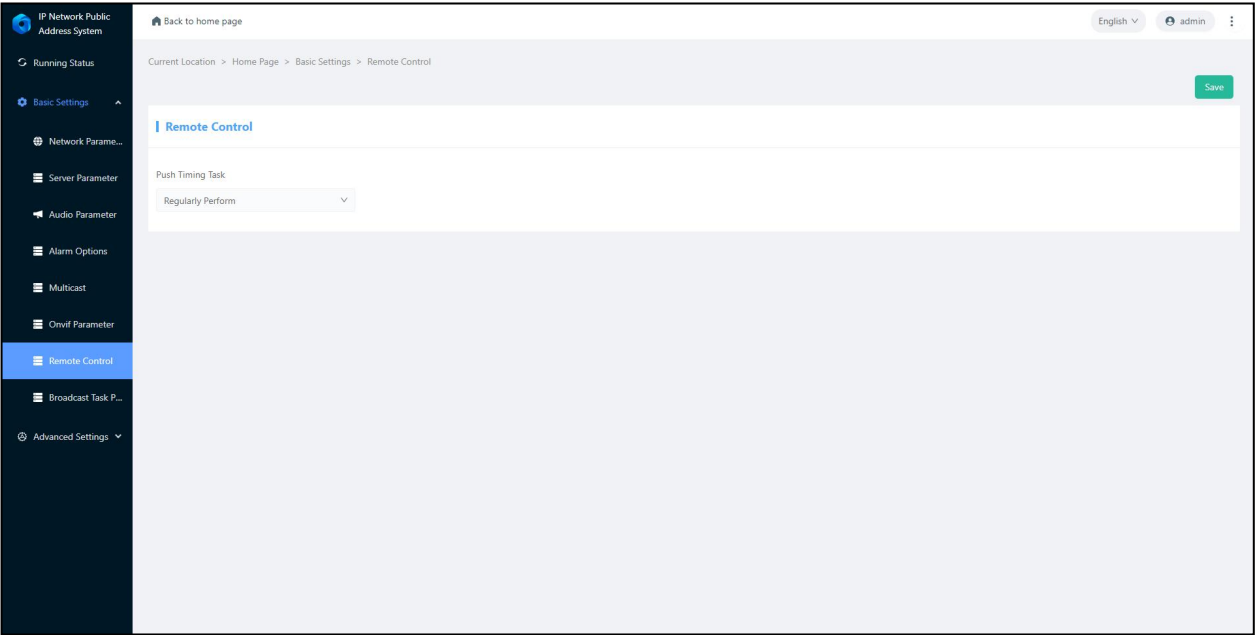


The relevant Settings are as follows:

Push Timing Task	The SDK Control: Push by the audio file upload tool. It pushes the task ID on the audio file upload tool to the Unit through http, and it can be used in serverless situations. Regular Perform: Pushing timing task through server.
------------------	--

Broadcast Task Priority

Set the task priority. The default priority is SIP/NAS Broadcast > Audio File > Multicast > ONVIF > Line In.

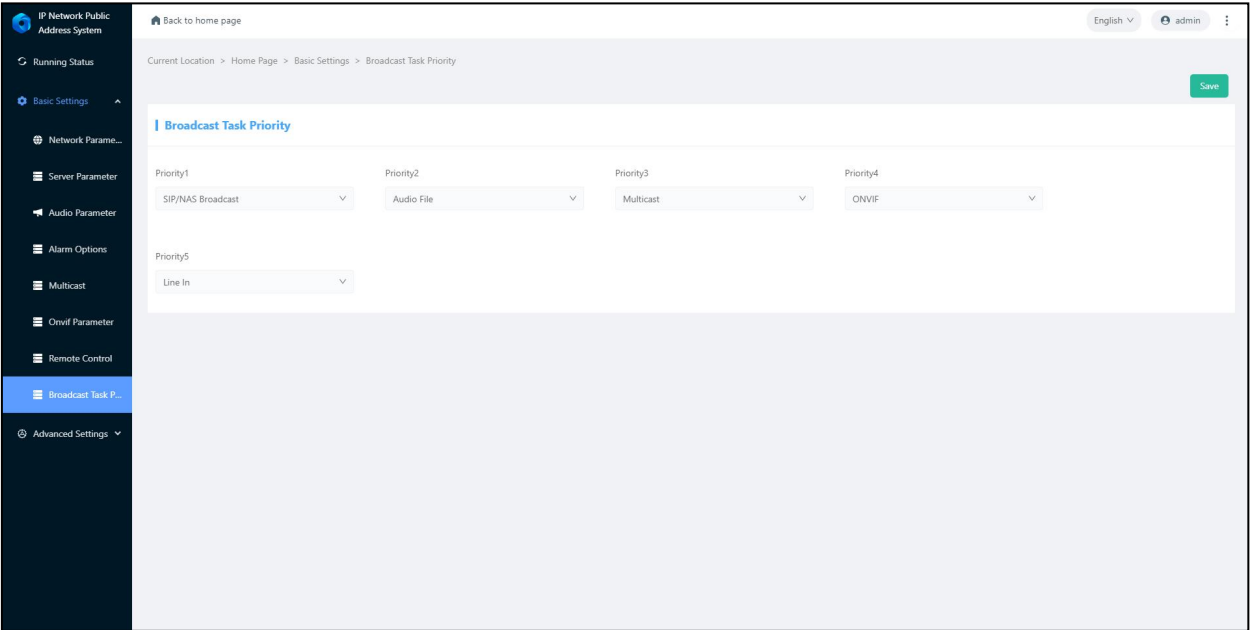

System Settings

Reboot: Click on this button will reboot the device.


Default: Click this button and all parameters of the device will be restored to factory Settings (please use with caution)

Delete: Click on this button will delete all offline audio files, make sure there is no audio output when deleting.

Check: Click the Check button to perform acoustic loop detection. Please ensure that there is no audio output during detection.


ANC Calibration: Click on this button will calibrate the ANC function, please ensure that there is no audio output during calibration.

Line Input Calibration: Click on this button to calibrate the line input threshold. Please ensure that no audio output is available during calibration.

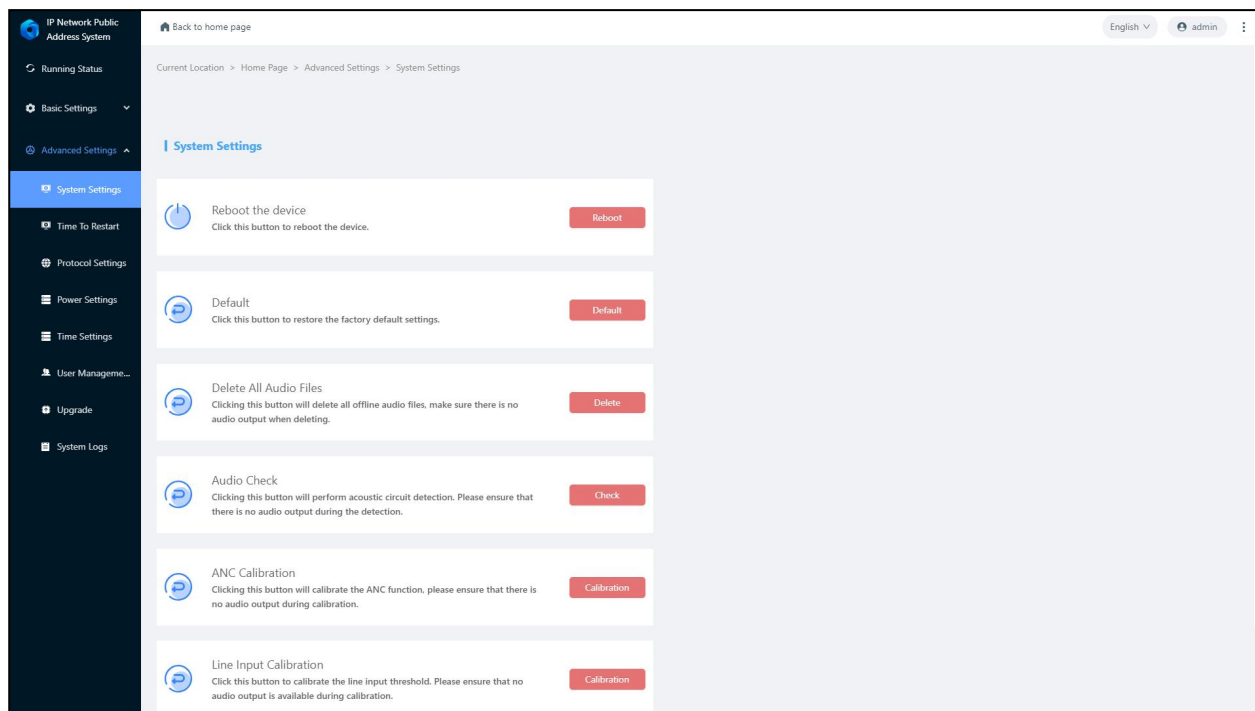

Time To Restart

After this function is enabled, you can set the time for restarting the device every day. The default value is disable.

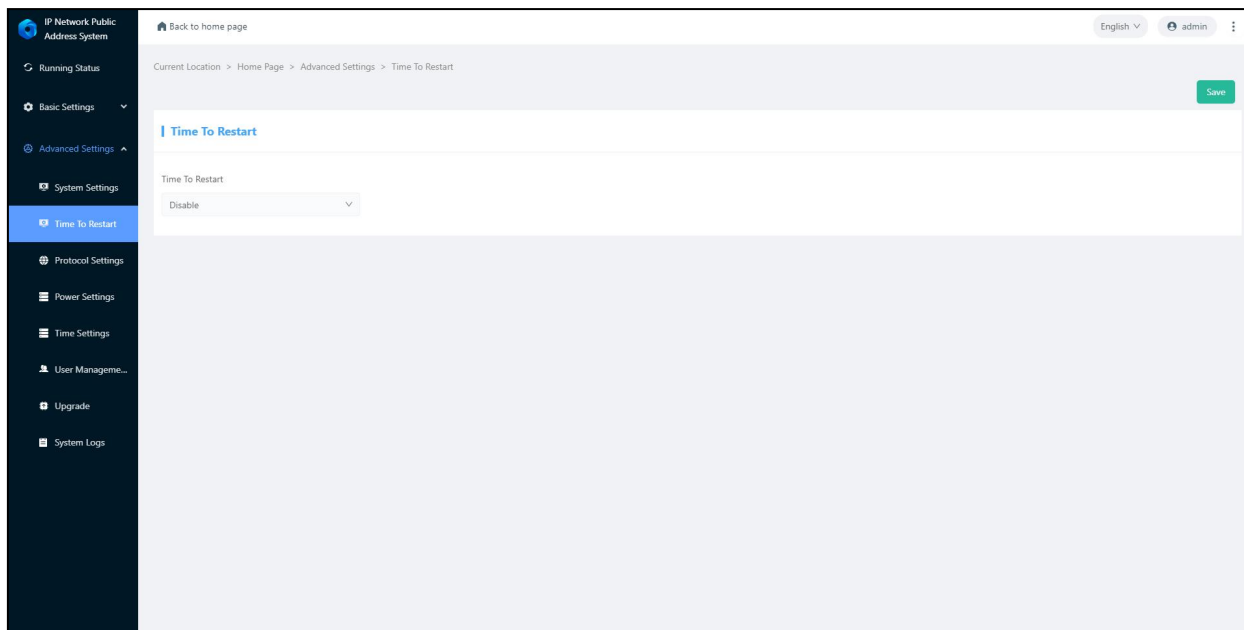


Protocol Settings

FTP: Set whether to enable FTP remote file transfer function. The default value is disable.


ICMP: You are advised to disable ICMP when using the new IP configuration tool to configure network parameters.

TELNET: Set whether to enable the TELNET remote login function. The default value is disable.

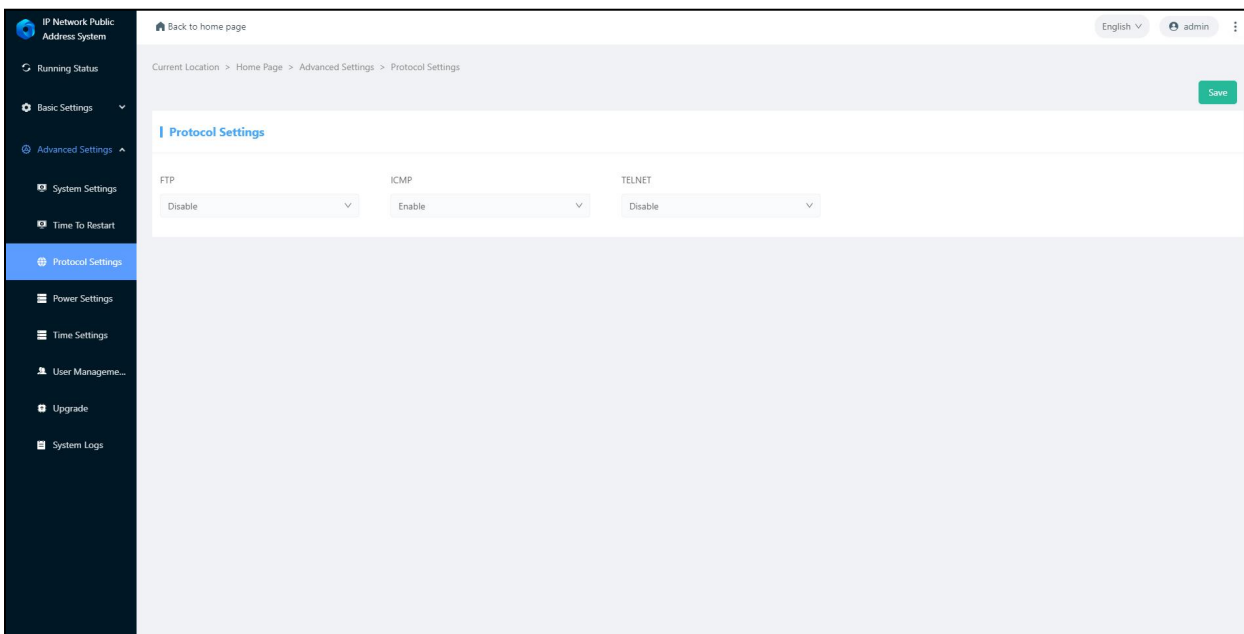

Power Settings

Set the power settings of the device, Click on [save] after setting, the parameters will take effect after reboot.

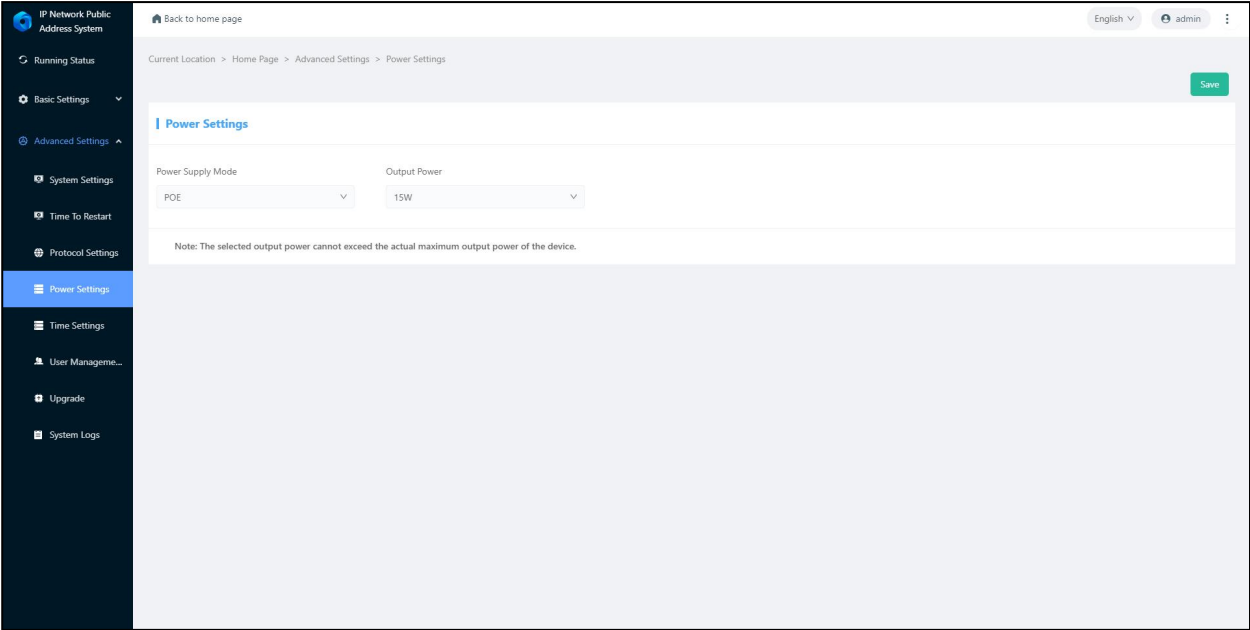

The relevant Settings are as follows:

Power Supply Mode	Select the power supply mode, support POE, POE+ and DC.
Output Power	Support 15W, 20W, and 30W. Note: In POE power supply mode, only support select 15W. In POE+ power supply mode, support select 15W and 20W. In DC power supply mode, support select 15W, 20W, and 30W.

Time Settings

Time Zone: set the time zone of the device.

NTP Server: Fill in the NTP server of the device.

Click on [save] after setting, the parameters will take effect after reboot.

The screenshot shows the 'Time Settings' page in the IP Network Public Address System. The left sidebar contains a menu with options: Running Status, Basic Settings, Advanced Settings (selected), System Settings, Time To Restart, Protocol Settings, Power Settings, Time Settings (highlighted), User Management, Upgrade, and System Logs. The main content area has a breadcrumb trail: 'Back to home page' > 'Current Location' > 'Home Page' > 'Advanced Settings' > 'Time Settings'. A 'Save' button is in the top right. The 'Time Settings' section includes a 'Time Zone' dropdown menu (set to 'UTC+00:00 GMT, Ireland, Portugal, ...') and an 'NTP Server' text input field (containing 'time.windows.com').

User Management

You can change the password for logging into the WEB in this page. After save the password change, rebooting the web page to take effect.

The screenshot shows the 'User Management' page in the IP Network Public Address System. The left sidebar is identical to the previous screenshot, with 'User Management' highlighted. The main content area has a breadcrumb trail: 'Back to home page' > 'Current Location' > 'Home Page' > 'Advanced Settings' > 'User Management'. A 'Save' button is in the top right. The 'User Management' section contains four input fields: 'User Name' (containing 'admin'), 'User Password', 'New Password', and 'Confirm Password'.

Upgrade


Software Version: The current firmware version of the device.

Click on "Upgrade" button, you will enter the firmware upgrade mode after 15 seconds.

Click on "Select file", select the upgrade file provided by the manufacturer, and click "Start upload" to start the upgrade.


Note: Do not power off during the upgrade process, otherwise the upgrade may fail and the device fails.

Finally, click on reboot and back to normal settings.

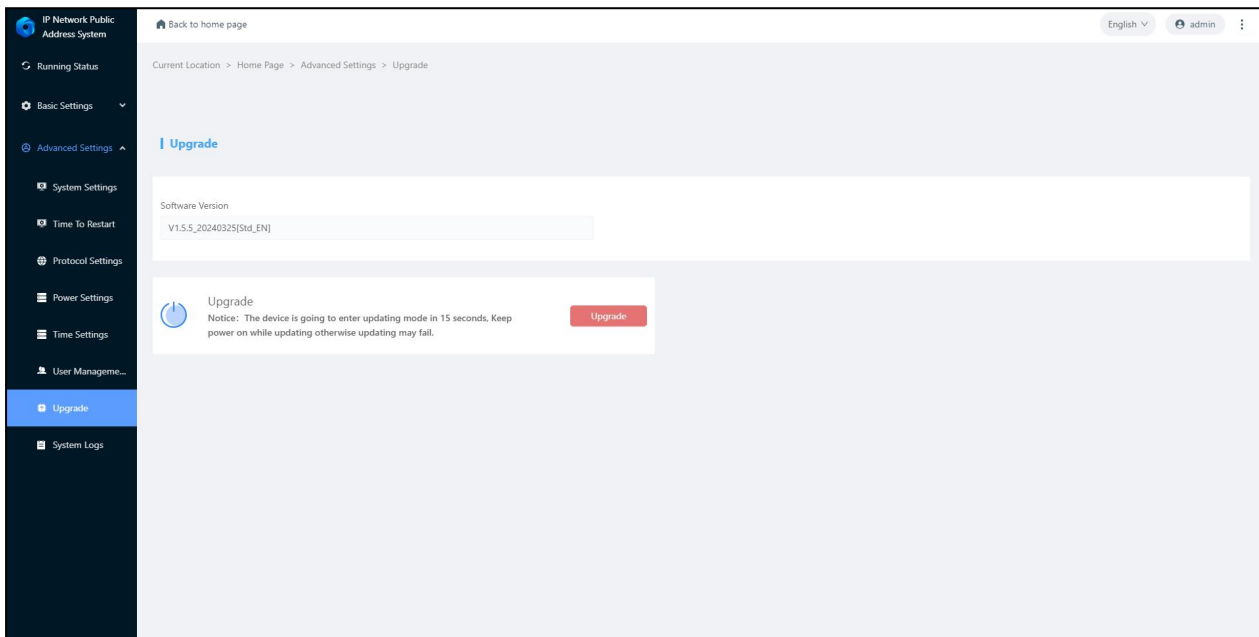

System Logs

Network Horn Speaker can automatically record the running process and generate logs, and support users to download system logs.

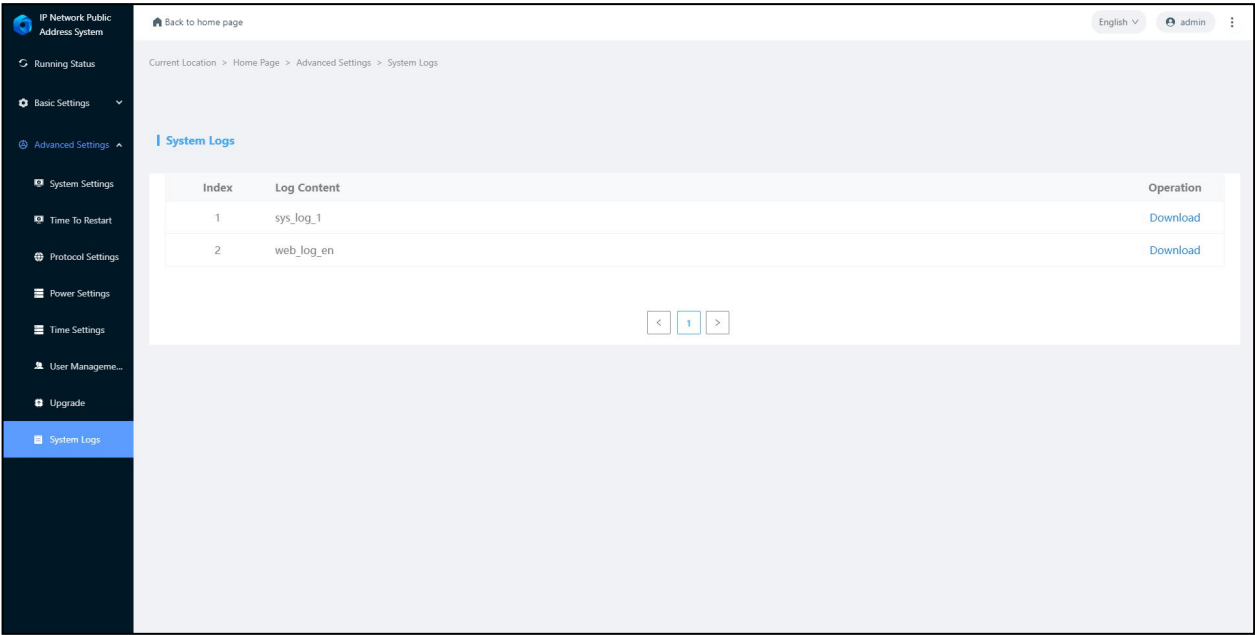

3.3 Basic Function

Receive Broadcast

Network Horn Speaker can receive broadcasts initiated by other terminals and server.

Receive Intercom

Network Horn Speaker can receive intercom initiated by other terminals.

3.4 Troubleshooting

Why the terminal is still "offline"?

- 1).Check the software server and the main controller is normal opened or not. It's required to close all firewall before open the software server (including system built-in firewall and other antivirus software firewall) .
- 2).Check the network connection is normal or not. After the terminal powered on, the network port green light is norm on, meantime the orange light will be short and fast flash, it means the network cable hard-connected normal. If the network port green light is not on, it means the network hard-connected problem, please check the terminal network cable and switcher whether they work normal, damaged and disconnect or not etc.
- 3).Check the terminal IP setting. Please check the terminal ID, sever IP, local IP, gateway IP ...etc parameters.

When web show abnormal?

Please clear the caches or change the browser.

How to change the web login password?

- 1 .Click the user management in webpage.
2. Input the old password in user password column.
3. Input the new password in new password column.
4. Input the new password again for confirmation
- 5.Click save .

The new password will be effective after reboot.

Copyright statement

Copyright

The manual, which is created or developed on the basis of SPON copyright, is the intellectual property of SPON. Without prior written consent by SPON, any reproduction, modification, or retransmission, in any form or by any means, is illegal and strictly prohibited.

In accordance with relevant laws, translation and conversion are contained in reproduction.

Only for private use, downloading and printing of the manual is not prohibited when it is spreading on internet and media.

No part of the manual is allowed to be reproduced or used for commercial purpose. And SPON shall take no responsibility for any losses or damages caused by the illegal reproduction and conversion of the manual.

Warranty

The manual is subject to modification, and there is no further notice if it is modified. Accurate statement, information and suggestion are provided in the manual to the best. But any expression or implication are not guaranteed by SPON, and users bear full responsibility for the application of product.

SPON made no guarantee about the manual, including but not limited to any contained marketability or specific guarantees. SPON bears no responsibility for any indirect or incidental losses caused by improper use of the manual.



SPON Communications Co., Ltd.
www.sponcomm.com
Service Hotline: +86-731-85570190
Reserve the amendment right without notice

